

IMPORTANT SAFETY INSTRUCTIONS:

• For Nickel Metal Hydride (NiMH) rechargeable AA & AAA batteries only. • Do not use to charge Nickel Cadmium (NiCd), Alkaline, Carbon Zinc, Lithium or any other kind of battery not specified on the charger. • Charge before use and according to charger instructions.

Remove the batteries from the unit once they are charged, and disconnect the charger from the power outlet. • For indoor use only.

OPERATING INSTRUCTIONS:

1. Connect the AC adapter's output plug to the charger.
2. Insert batteries in the charger respecting the polarity (+/-). If the polarity is reversed or the batteries are not suitable for charging, the red LED will flash and the charger will not start charging.
3. Load: The charger has four channels, at the same time, you can charge 1 or up to 4 batteries.

AA	1 to 4 pieces at a time
AAA	1 to 4 pieces at a time

Can mix battery sizes and capacities in different channels.
4. Plug the adapter to a household electric outlet. A green LED power indicator on the charger will illuminate. Another red LED will illuminate indicating that charging is in progress.
5. When batteries are charged, the red LED will turn off.
6. After use, disconnect the plug from the outlet and remove the batteries. ALWAYS UNPLUG BETWEEN CHARGES.

CAUTION:

• Never use an extension cord or any attachment not recommended by Energizer, as this may result in a risk of fire, electric shock or personal injury. • The supplied AC adapter supplies 12V DC and delivers 1600 mA. Using an adapter that does not meet these specifications could damage the charger or the adapter. • Never alter the plug provided. If the plug does not fit the outlet, the proper outlet must be installed by a qualified serviceman. Improper connection can result in a risk of an electric shock. • Do not operate the charger if it has been subjected to shock or damage. Take it to a qualified serviceman for repair. • Do not disassemble the charger. Incorrect re-assembly may result in risk of electric shock or fire. • During charging, unit and batteries may feel warm. • Never use as a power source for any electrical equipment. • Do not expose charger or adapter to excessive moisture.